

## STIL - USB interface module

The STIL-USB interface is required for hardware specific parameter setup of the STDL drive.

It is used together with the setup software "STDL Workspace" installed on any Windows PC.

The STIL-USB interface itself is ready to use.

The STIL-USB interface works as a safe and galvanic separating bridge between your PC and the STDL hardware.



