

## Connectors

The connectors can be used for all positioning systems. The connectors ensure that the PSE (IP 54) and PSS (IP 65) comply with the IP protection classes.

Please contact us for connectors for the PSW (IP 68).



9601.0060



9601.0062



9601.0088



9601.0090

## Connectors



9601.0112



9601.0317



9601.0107

## General Data

Designation	Description	BUS Communication	Remark
9601.0060	Connector Set 0: Power supply + databus connector (2x)	Can Open (CA); Profi Bus (DP); Modbus (MB)	-
9601.0062	Connector Set T: Power supply + databus connector (2x) + jog key connector	Can Open (CA); Profi Bus (DP); Modbus (MB)	Not for PSS / PSW
9601.0088	Connector Set 0: Power supply + databus connector (2x)	Device Net (DN)	-
9601.0090	Connector Set T: Power supply + databus connector (2x) + jog key connector	Device Net (DN)	Not for PSS / PSW
9601.0112	Connector Set 0: Power supply + databus connector (2x)	Sercos (SE); EtherCat (EC); ProfiNet (PN); Ethernet IP (EI); PowerLink (PL)	-
9601.0317	Connector Set T: Power supply + databus connector (2x) + jog key connector	Sercos (SE); EtherCat (EC); ProfiNet (PN); Ethernet IP (EI); PowerLink (PL)	Not for PSS / PSW
9601.0107	Connector Set 0: Power supply + databus connector (2x)	IO-Link (IO)	-