

Seal Unit

All runner blocks are delivered with greased seal units. The basic material is POM.

Instructions for the replacement:


- Pull exchanged seal unit up.
- Insert the new seal unit.
- Push the runner block back on the guide rail.
- Align the seal unit vertically to the guide rail.

Note! Assembly with mounted carriage is not possible.

Dimensions in mm.



Dimensions

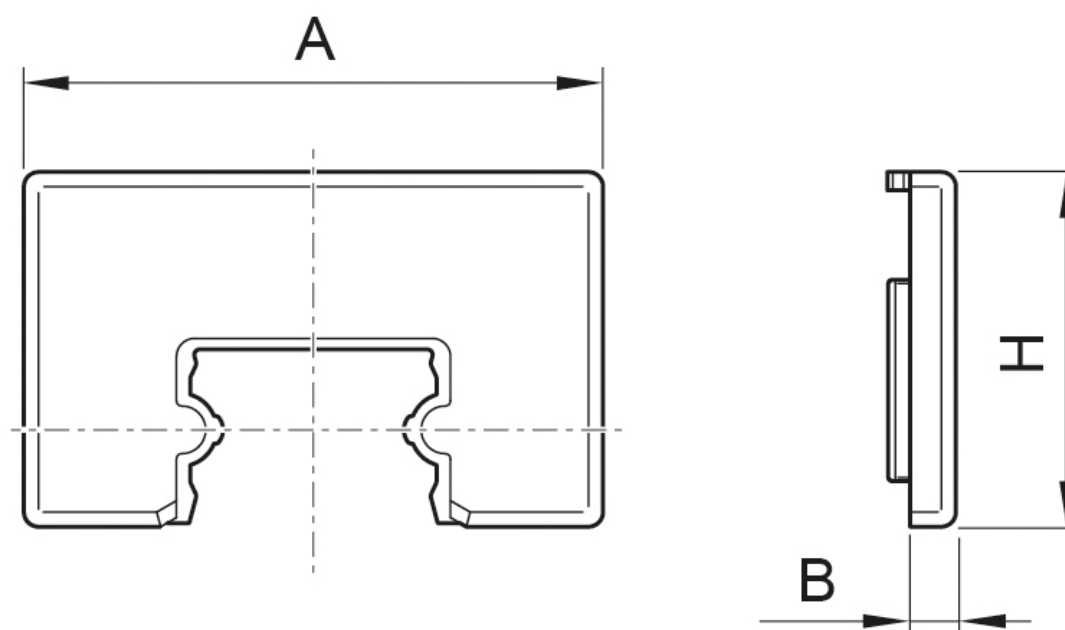

| Designation | A | B | H |
|--------------|------|-----|------|
| nVA15 | 31.7 | 2.5 | 19.4 |
| nVA20 | 43.2 | 2.8 | 24.3 |
| nVA25 | 47.2 | 3 | 26.3 |